

Sill Attachment Plate Instructions for:


- **Product Series** - V1 Series
- **Product Type** - Integral Combination Single-Hung with Masonry Flange

Parts Included

#14 x 1/2" Self-Tapping
Pancake-Head Phillips
Screw



Sill Attachment Plate

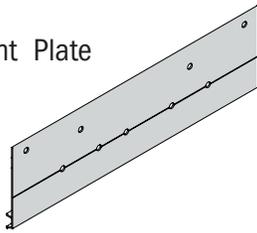


Tools Needed



Safety
Glasses



Drill/
Driver

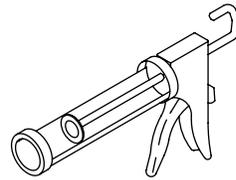


Caulk
Gun



Tape Measure

Supplies Needed

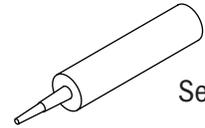


Sealant

⚠️ WARNING

- Use caution when working at elevated heights and around window and door openings. Follow the manufacturers' instructions for ladders and scaffolding. Failure to do so could result in injury or death.
- Follow manufacturers' instructions for hand and power tools. Always wear safety glasses. Failure to do so could result in injury, product or property damage.


1

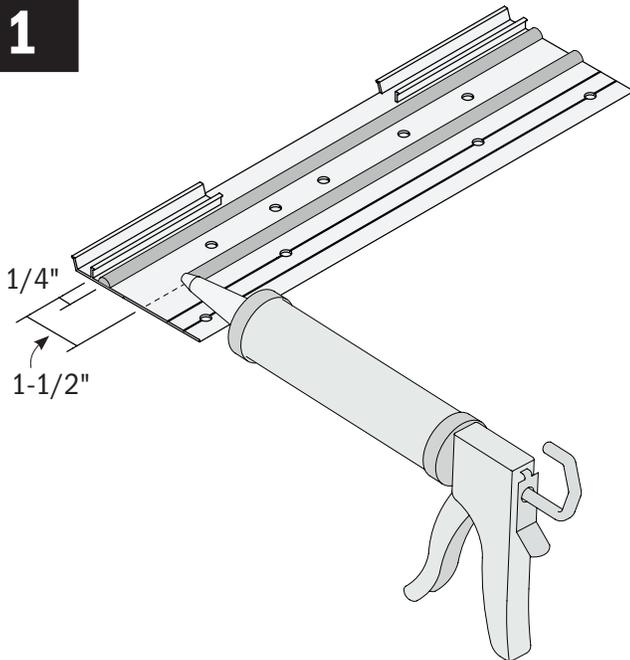


Apply two 1/4" beads of sealant to the sill attachment plate(s), full width, as shown.

2

Twin

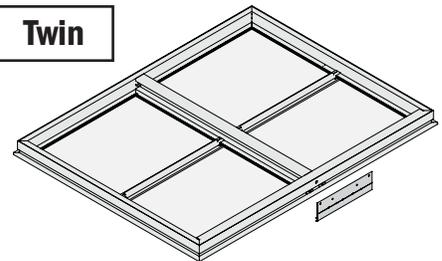


Triple

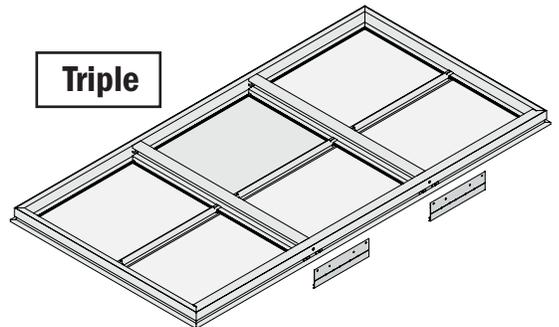


Place window interior side up on a clean working surface and center the sill attachment plate(s) under the integral post location(s) as shown.

3

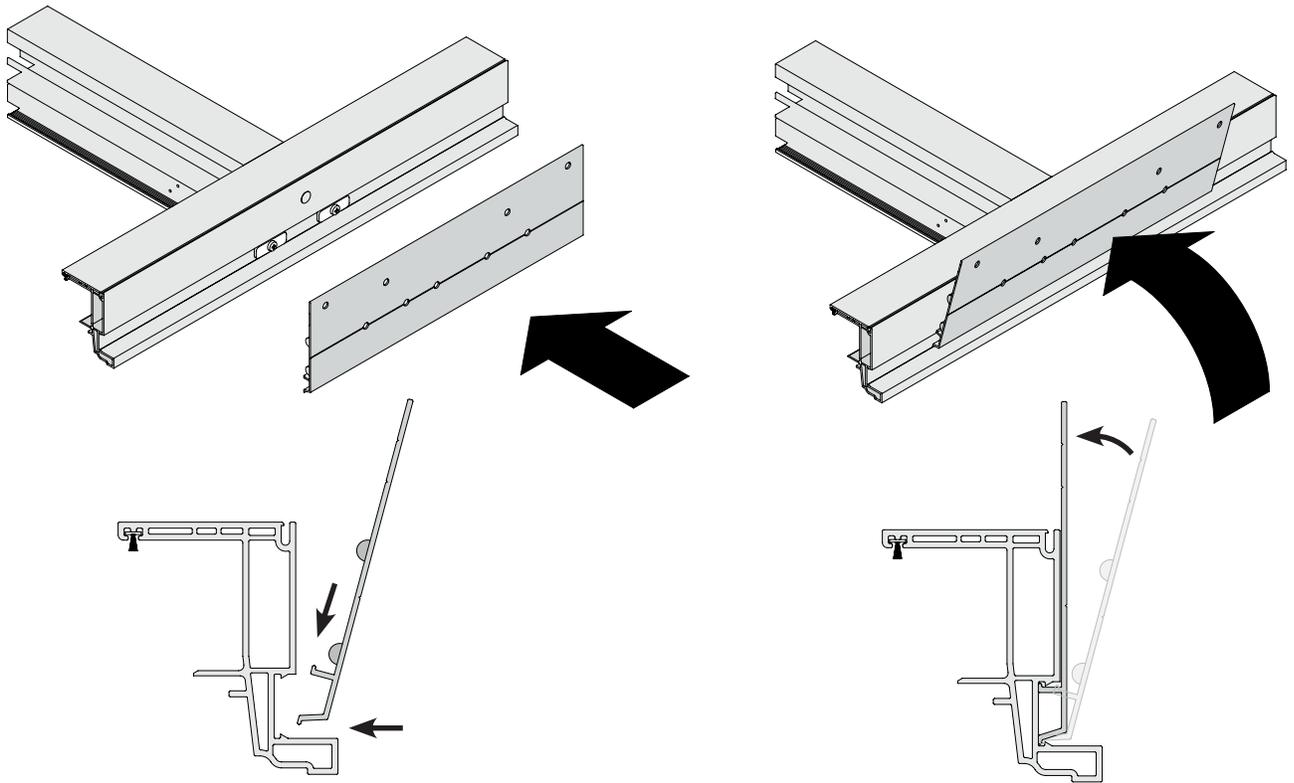

Apply sill attachment plate(s) by inserting the front leg of the sill attachment plate(s) into the channel of the frame's masonry flange at a slight angle. Rotate the sill attachment plate(s) until the back leg snaps into the frame.

4

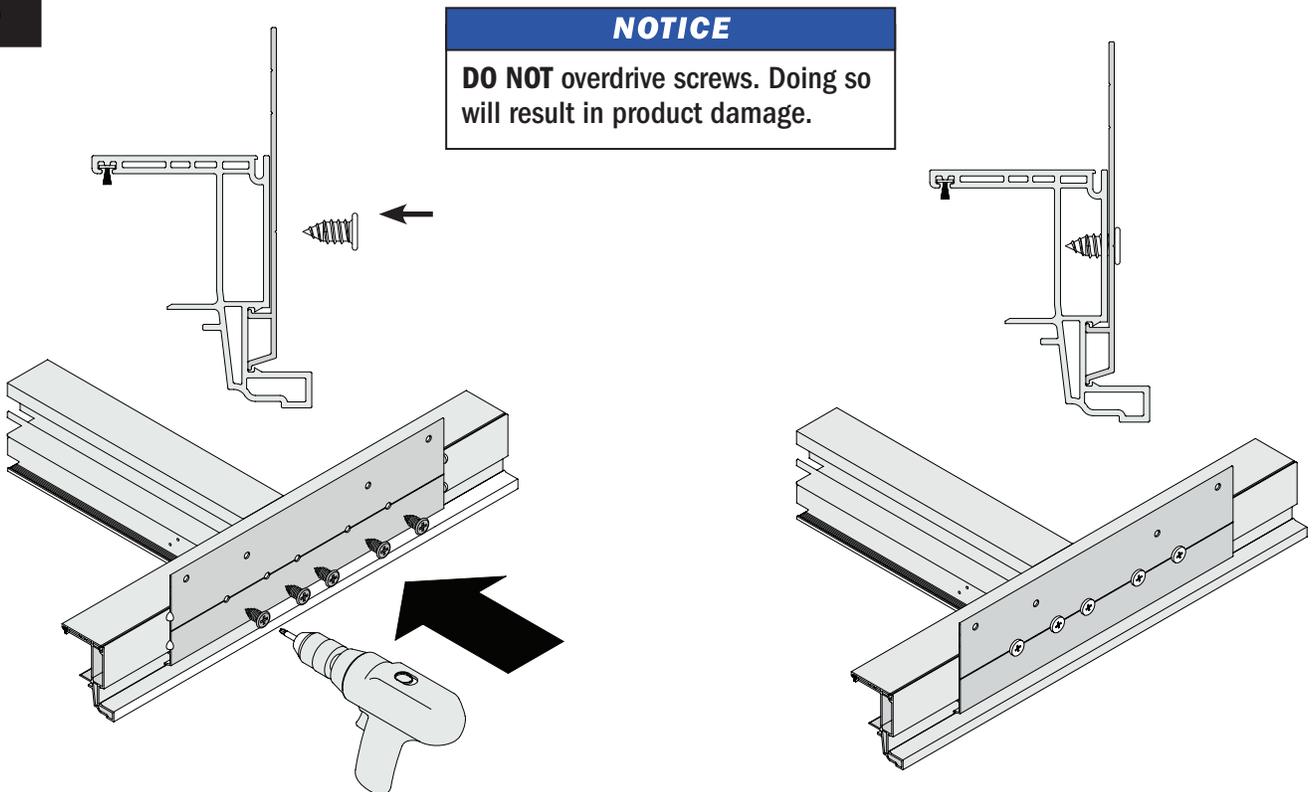

Fasten the sill attachment plate(s) with five (5) - #14 x 1/2" self-tapping Phillips pancake-head screws. Sill attachment plate application is complete.